

SafeSuite™ Release Notes

2 Automatic Road, Suite 108
Brampton, Ontario
Canada L6S 6K8

Eight Zone LED

Firmware Version 8.0

- The bug cards not being erased with their associated user code has been fixed.
- Unlock Time is now user programmable as item 15.

Firmware Version 8.1

- Writing to memory is now allowed if panel is armed.

Firmware Version 8.3

- Alarm memory is now clear when changing modes.

Firmware Version 8.4

- Card disarming of panel is now reported by associated user number.

Firmware Version 8.6

- A link bug was fixed.

Firmware Version 9.0

- A log message will be recorded whenever the user shunts or un-shunts any input or whenever the unit is disarmed and a previously shunted input is un-shunted automatically.



AXS-LED-8z has been discontinued.

4 Zone LED

Firmware Version 4.3

- Firmware version for four-zone LED panel.

Firmware Version 4.4

- The auto-arm feature was removed to stop false alarms from follower zone that were still violated when the exit zone cleared.
- Double message bug was fixed.
- The protocol for multiple remotes has been upgraded.
- Deleted user codes being set to 1234 has been corrected (except - master code).

Firmware Version 4.5

- Zones 5-8 can now be shunted.
- A log message will be recorded whenever the user shunts or un-shunts any input or whenever the unit is disarmed and a previously shunted input is un-shunted automatically.

Firmware Version 4.6

- NO and NC (no resistor) inputs can no longer produce a trouble message.

Firmware Version 4.7

- One touch Arming has been added.

Firmware Version 4.8

- Card reader functionality has been added and remote keypad capability has been removed.

4 Zone LCD

Firmware Version 3.5

- Firmware version for four-zone LCD panel.

Firmware Version 3.7

- The auto-arm feature was removed to stop false alarms from follower zone that were still violated when the exit zone cleared.
- Double message bug was fixed.
- A protocol for multiple remotes has been upgraded.
- Deleted user codes being set to 1234 has been corrected (except - master code).
- The 'A' & 'B' keys allow access to available auxiliary commands, and allows the user to scroll & select.

Firmware Version 3.8

- A log message will be recorded whenever the user shunts or un-shunts any input or whenever the unit is disarmed and a previously shunted input is un-shunted automatically.
- The unit will no longer go off-line when the user is shunting.
- No longer will an input report trouble when it is set for normally open or normally closed.
- General Purpose inputs can be set to 'Chime'.

Firmware Version 3.9

- An input left violated at the end of the entry time will now not report as an alarm.

Firmware Version 4.0

- Offline operation has been removed.
- One-touch arm away mode has been added.
- Message display has been enhanced.