

Technical Bulletin

2 Automatic Road, Suite 108 Brampton, Ontario Canada L6S 6K8

Number: 27 Firmware Upgrade for Integra32

Before Upgrading

- 1. To upgrade the firmware the Integra software must be shut down.
- 2. It's advisable to restart Integra32 Server service before upgrading Firmware.
- 3. Before starting the firmware upgrade be sure to know where the upgrade file (*.*rbh*) is located.
- 4. Although upgrading will not affect the panel's memory, it is recommended that you download all files to the panel after upgrading to ensure that any new features are properly installed.

Upgrading

Run *Integra32 Firmware Upgrade* from the menu selection under *Start – Integra32 Security System*.



You will need to log onto the server

Connect to Serve	er		
Axiom	<u>Lite</u> ~	Int	egra
<u>L</u> ogin Name:	rbh		v5.1.1
Password:	******		
Server:	Default		•
		01	Canaal
RBH			Laricel

After logging in the Upgrade Wizard will come up. Browse and select the upgrade file (*IRC*u.rbh/URC*u.rbh/UNC*u.rbh*). The upgrade file's path will be shown in the box next to the browse button.

Integra32 Firmware Upgrade Wiz	zard	
J?	The wizard will guide you through upgrading the firmware of IRC-2000 panels.	
J8 Set	Select the firmware upgrade file. This must be a valid IRC-2000 Firmware upgrade file. C:\Program Files (x86)\rbh\IRC158AU.RBH	
Help	< <u>B</u> ack <u>N</u> ext > <u>C</u> lose	

Click 'Next' after the appropriate file has been selected.

Integra32 Firmware Upgrade Wizard	
Select panels to upgrade	
Panel	Network
1 - Panel 1 207	Network 207
1 - Panel 1 209	Network 209
Z - Panel 2 209	Network 209
3 - Panel 3 209	Network 209
4 - Panel 4 209 elv	Network 209
1	
Help	< <u>B</u> ack <u>N</u> ext > <u>C</u> lose

Next select which panel(s) should be upgraded to. Then click 'Next'. You don't have to select all the panels at this time. After upgrading you can come back to this screen.

Clicking 'Start' will begin the Upgrade.

Integra32 Firmware Upgrade Wizard		
Upgrade status		
Upgrade started to panel (2 - Panel 2 20	9)	
		Cancel
Help	< <u>B</u> ack <u>N</u> ext >	Close

A progress bar and messages will keep you informed during the proceedings.

Int	tegra32 Firmware Upgrade Wizard	
	Upgrade status	
	Upgrade started to panel (2 - Panel 2 209) (2 - Panel 2 209) Firmware upgrade completed to panel (2 - Panel 2 209)	
	Start	
	Help < <u>B</u> ack <u>N</u> ext > <u>C</u> lose	

There will be a 'completed' message after each panels' Firmware Upgrade. You can go back to select other panels or close if you are finished upgrading.