



RBH ACCESS CONTROL SOLUTION

Controller Compatibility

RBH Controller Series

| | <div>Integra 32™</div> <div>INTEGRA32 R5</div> <div>(On prem.)</div> | <div>AxiomXa</div> <div>AXIOMXA</div> <div>(On prem.)</div> | <div>AxiomV™</div> <div>AXIOMV R4</div> <div>(On prem.)</div> | <div>AxiomCLOUD</div> <div>AXIOMCLOUD</div> <div>(ACaaS)</div> |
|----------------------|--|---|---|--|
| INT-UNC100 | ✓ | ✓* (requires flash Axiom UNC100 firmware) | ✓* (requires flash Axiom UNC100 firmware) | ✓* (requires flash AxiomCLOUD UNC100 firmware) |
| AX-UNC100 | ✗ | ✓ | ✓ | ✓* (requires flash AxiomCLOUD UNC100 firmware) |
| UNC-500 | ✗ | ✓ | ✓ | Forthcumming (requires flash AxiomCLOUD UNC500 firmware) |
| IRC-2000 | ✓ | ✓*** (requires physical Axiom NIRC firmware) | ✓*** (requires physical Axiom NIRC firmware) | ✓*** (requires physical Axiom NIRC firmware) |
| NIRC-2000 | ✗ | ✓ | ✓ | ✓ |
| URC-2000 | ✓ | ✓*** (requires physical Axiom NURC firmware) | ✓*** (requires physical Axiom NURC firmware) | ✓*** (requires physical Axiom NURC firmware) |
| NURC-2000 | ✗ | ✓ | ✓ | ✓ |
| RC2 | ✗ | ✓ | ✓ | ✓ |
| IOC16 | ✗ | ✓ | ✓ | ✓ |
| IOC8 | ✓ | ✗ | ✗ | ✗ |
| SAFESUITE (AXS-LCD) | ✗ | ✓ | ✓ | ✗ |
| EXTRDR | ✓ | ✗ | ✗ | ✗ |
| NC100 (DISCONTINUED) | ✗ | ✗ | ✗ | ✗ |

- * Controller firmware must be flashed by the dealer.
- ** Controller firmware must be physically replaced by the dealer.

Firmware is access-control-solution specific.