

Integra 32 ТΜ

System Capacity:

A Maximum of 128 doors. Basic software (included with a kit) supports 64 doors with up to 2 readers each (In/Out). In addition to the server, an additional 9 users can administer Integra simultaneously from other PCs.

Multi-Swipe Functionality (authorized cardholders only):

Swiping an authorized card consecutively over a 2 second period will allow the designated cardholder to control the door itself, as well as initiate a custom configured action sequence system-wide.

• First Person Delay The door will not unlock on schedule if no one comes to work!

 5 card formats can be used simultaneously. For example: 26-bit + CDVI+ Keyscan + Kantech + RBH, Over 30 formats included, easy to add additional.

 Special 26 and 34-bit formats to use all site codes at the same time.

from end user is needed to authorize password reset.

Door unlocking and Card / Card+PIN mode changes done by schedule

2-Swipe Locks/Unlocks Door 3-Swipe Custom Action #1 4-Swipe Door's High-Security On/Off 5-Swipe Custom Action #2

• Sally Port (mantrap) Logic Built into the panel, activate with a single check mark, no special wiring required!

 Code Reader Links Execute automation commands by punching a code after a valid card swipe.

- Built in automatic backup
- Global Anti-passback with Anti-tailgating



CAT5, CAT6, 300' Max.

Compatible Software Modules:

RBH-INT32-SOFT	Base software includes: Web client, RBH BFR, and RBH View support
RBH-INT32-SUITE	Software Suite includes: -BB, -IMP, -VM1
RBH-INT32-BB	Integrated PhotoID Module
RBH-INT32-EMAIL	Email Option
RBH-INT32-VM1	Visitor Management
RBH-INT32-IMP	Data Import Module
RBH-INT32-128	Expand to 128 Doors
RBH-INT32-UPG	Upgrade software from R4

Compatible Accessories:



RBH-LIF-200 Ethernet LAN Module Auto 10/100 detection RS-232 or **RS-485**

RBH-URC-ELV8-B

8-Floor Elevator expansion module for URC-2008. 3 max

RBH-EXITRDR Exit Reader Module for

bi-directional reader control





Notes:

www.RBH-Access.com

info@RBH-Acess.com

40va

RBH Access ©2021

12V 7Ah

Controllers: 10.0 -FR360N Includes RBH-FR-360N readers (AWID + Keri Wiegand) -FR360N-H Includes RBH-FR-360N-H multi-format readers (HID + AWID + Keri Wiegand) -2400 Includes AWID SR-2400-MP multi-format readers (AWID + HID) Model: UNC - 100 IRC - 2000 URC - 2004 URC - 2008 URC - 2005 -UL (IRC) -C (UNC) UL outfit (IRC-2000, IRC-2010, UNC100 only) Access Points: 2 2 4 4 2 -B Circuit board only - no enclosure, no power supply, no software 8,000 5,000 3,000 3,000 3,000 Cards: Events: 3,000 3,000 3,000 3,000 3,000 Inputs: 4 8 8 4 8 2 + 2 4 + 4 4 + 4 4 + 4 4 + 4 Outputs: TCP/IP: Yes * * * * RS - 485: Yes Yes Yes Yes Yes * = Requires LIF 200 Module FR-360N-H **FR-360N** 2400MP HID-6005 M45-DNB-D blueLINE All panels store 3,000 events in a buffer, **Keyfobs (keytags)** AW-PROXLINC-KT HID-1346 **RBH-AB-KT-EV1-2K** Flash upgradable and function independently Convenient Example 1: RBH-INT-UNC100-122S-360N Includes: 1 UNC-100 controller, 6 HID 2 of FR-3060N card readers, **AW-PROXLINC-CS Clamshell Cards** HID-1326 64 Door Software, 9 additional client licenses Thicker, best range ProsCard'I **RBH-PROXLINC-GR Printable Cards** HID-1386 **RBH-AB-ISO-EV1-2K** المحيدة المحيدة Thinner PROX HID (125KHz) MIFARE (13.56MHz) Example 2: RBH-URC-2005 Technology **AWID** (125KHz) No readers 64 Door Software, 9 additional client licenses Installed ("fat") Access DVR & Photo ID Badging Any client can be 3rd-party DVR & NVR Integra Clients NVR Integration on all clients used for fingerprint integration Multi-brand on all clients enrollment Integration LAN, WAN PRIVATE NETWORK and/or INTERNET In_e Up to 32 (64) Out_ Biometric Elevator Alarm LIF-200 Readers Control Panel Networks Integration Exit Reader Module PC-100 URC URC IRC 2000 2000 RBH, RBH

RS-485 Links up to 16 panels together (up to 4,000')

RS-485 Links up to 16 panels (4,000' max)

Options: